

Measuring equipment





Resistant probe for measuring of air temperature and humidity, with cable.

Operating instruction:

- 1. Climatic probe CS-06 with Mini-USB plug and 70cm cable. Connect cable into the destined socket at the measurement device.
- 2. Make sure that there is a free airciculation through the ventilation holes.
- 3. Read out the measured value of the measurement device. After usage make sure to properly store the device to protect the sensors.
- 4. Measuring range:

```
-10°C – 50°C (Tol: +/- 0,3 degree)
```

```
10 – 99% Relative Humidity ( Tol: +/- 2% RH).
```

5. Accessory for VI-D4.